

Step 8

Installing Struts

If your door did not come with any struts then proceed to the next step.

- Attach the struts to every stile on the correct section with $\frac{1}{4} \times \frac{3}{4}$ TEK screws (see **figure 10**).
- Depending on the size and type of door, the location of the struts will vary. Contact your dealer for exact placement of the struts.



!!!! Warning!!!!

If your door has an electric opener then the top section must have a strut mounted above the top fixture.

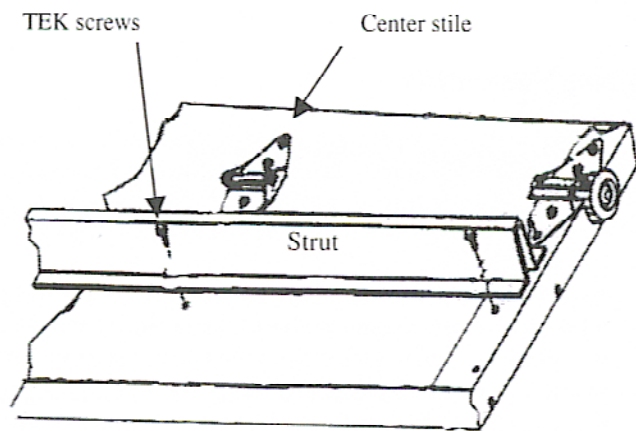


Figure 10

Step 9

Installing Lock Bar Guide

- If your door utilizes the extension bar for a key lock, the guide should be placed on the proper end stile corresponding to the operating direction of the lock.
- Attach the lock bar guide using two TEK screws as shown in **figure 11**.

Note: Make sure that the guide is in line with the square lock hole in the track.

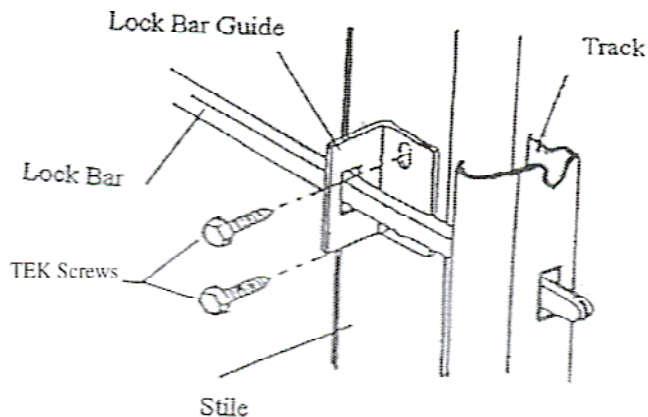


Figure 11